

Citi-Electronic Programmer User Manual

V1.2

CONTENTS

1. Preface	1
1.1. Objective	1
1.2. Programmable LED driver product family	1
2. Introduction to programmer hardware and software	1
2.1. Introduction to the Programmer Panel	1
2.2. The programmer is wired to the LED driver	2
3. Software installation and use	4
3.1. Operating system requirements	4
3.2. Software installation	4
3.2.1. Software decompression	4
3.2.2. Driver installation	4
3.3. Functional description of the software	5
3.3.1. Software main interface	5
3.3.2. Window area description	6
3.4. Programmer firmware upgrade	7
3.5. Online programming and offline programming	8
3.5.1. Online programming	8
3.5.2. Offline programming	9
4. Introduction to programmable LED driver functions	10
4.1. Programmable LED driver functions	10

4.2. Programmable LED driver functions explained in detail	10
4.2.1. Work Current Setting	10
4.2.2. 3in1 Dimming	11
4.2.3. Timer Dimming	12
4.2.4. Software Start Adjustable	13
4.2.5. End Life Alarm	14
4.2.6. Constant Lumen Output	15
4.2.7. NTC Protection	15
4.2.8. OTP Protection	24
4.2.9. Model Parameters	25
4.2.10. DALI Application Parameters	26
4.2.11. Product Identification	26
4.2.12. DALI Memory Bank 1	27
4.3. Introduction to the adaptive timer function	28
4.3.1. Adaptive timer function application	28
4.3.2. Adaptive time calculation	28
4.3.3. Adaptive timer dimming	29

1. Preface

1.1. Objective

Helps users proficiency in using Citi-Electronic Programmer programming software, programmer (SS-EASY-LINK) connection, and quickly set up LED driver functions.

1.2. Programmable LED driver product family

VP series, M series, VB series, VP-H series, VA series, VA-T series, VH series, VH-E series, PA series, etc.

2. Introduction to programmer hardware and software

2.1. Introduction to the Programmer Panel



The wiring sequence from top to bottom is: DIM-, VCC+, DIM+.

After the LED driver is connected, the programmer is powered on and can be operated by the "-" "+" "P" three keys (the "-" "+" key is used only as a fine adjustment).


The function of the button "-" is to reduce the current output by up to 10%. With one click, reduce the ratio to 0.5% of the maximum output current of the LED driver.

The function of the button "+" is to increase the current output by up to 10%; with

one click, the proportion of the increase is 0.5% of the maximum output current of the LED driver,

The function of the button "P" is used for offline programming. You can write the internal model information of the programmer to the LED driver and modify the LED driver settings. When using offline programming, the internal model of the programmer must be the same as the LED driver model.

2.2. The programmer is wired to the LED driver

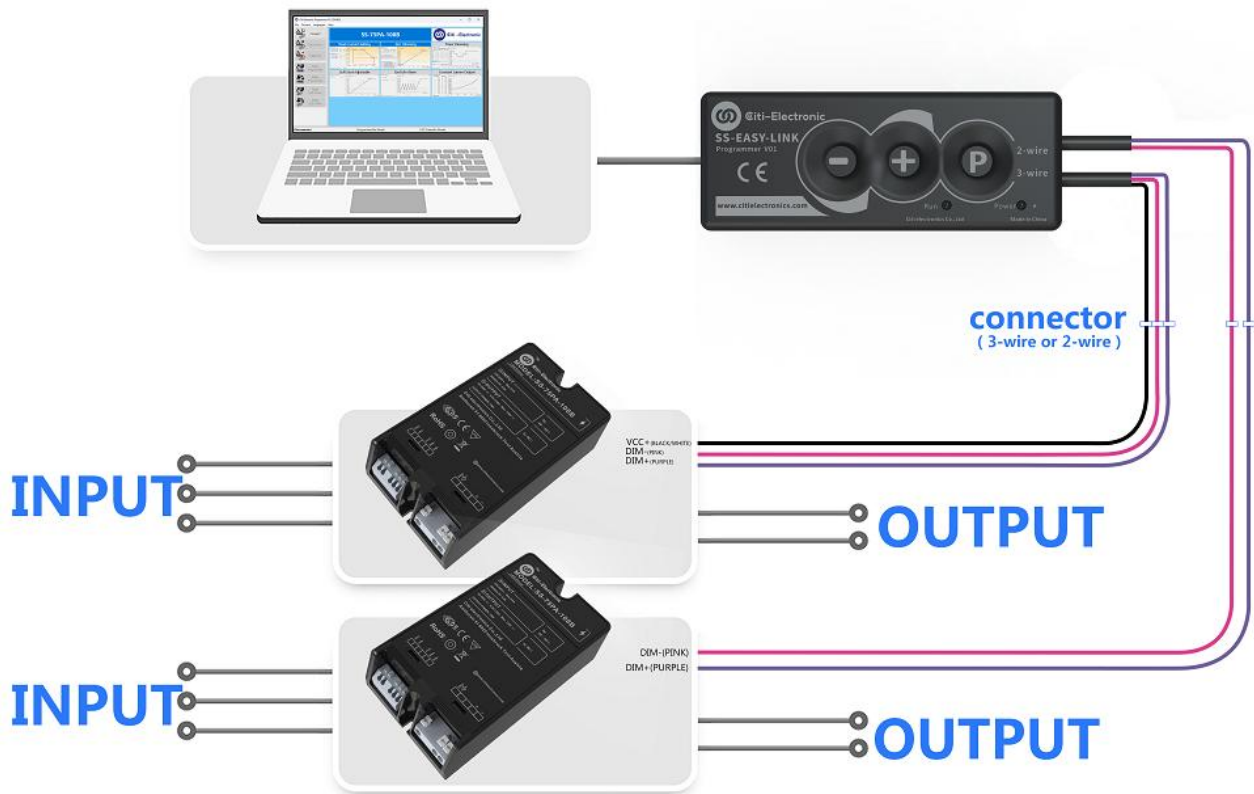

Dimming colors may change, and it is best to distinguish the wiring order according to the label of the programmer and LED driver:

“Programmer : DIM-” is connected to “LED driver: DIM-” .

“Programmer : VCC+” is connected to “LED driver: VCC+” .

“Programmer : DIM+” is connected to “LED driver: DIM+” .


The programmer is connected to the computer's USB port, and the programmer recognizes the LED driver.

Connection correct: "di" sound.

Programmer connection to LED driver failed: continuous "dididi~dididi~..." sound.

Programmer does not match the LED driver software version: "didididi" sound.

2.3. In specific cases, if the AC is disconnected, it can be programmed, but the AC cannot be programmed when it is opened. Between "DIM+" and "DIM-", a capacitor in the range of 473 to 104 (47nf to 100nf) is connected in parallel. Excessive capacitance can also cause programming failures.

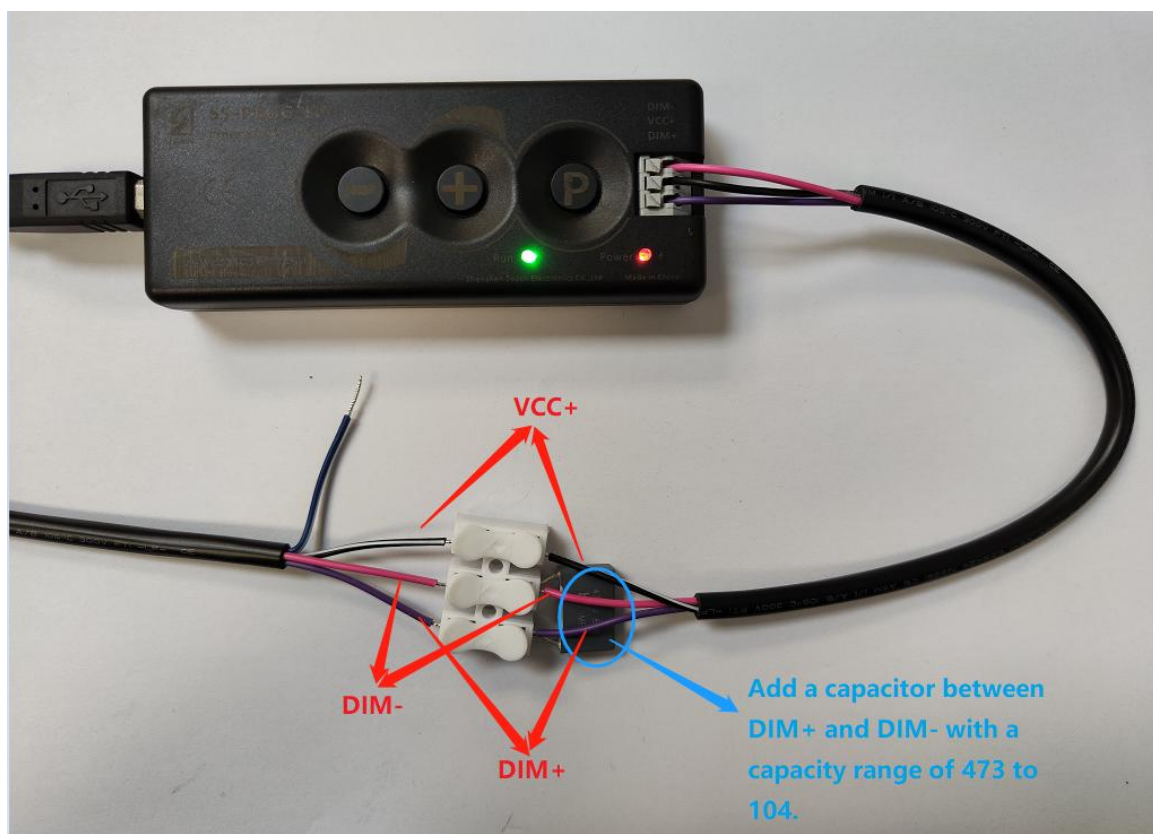

Please confirm that the above operation steps are correct, and then perform the following operations.

3. Software installation and use


3.1. Operating system requirements

Supports Windows 7, Windows 8, Windows 10, Windows 11.

3.2. Software installation


3.2.1. Software decompression

Extract the software package to the appropriate location, go to the software folder and send the shortcut to the desktop.

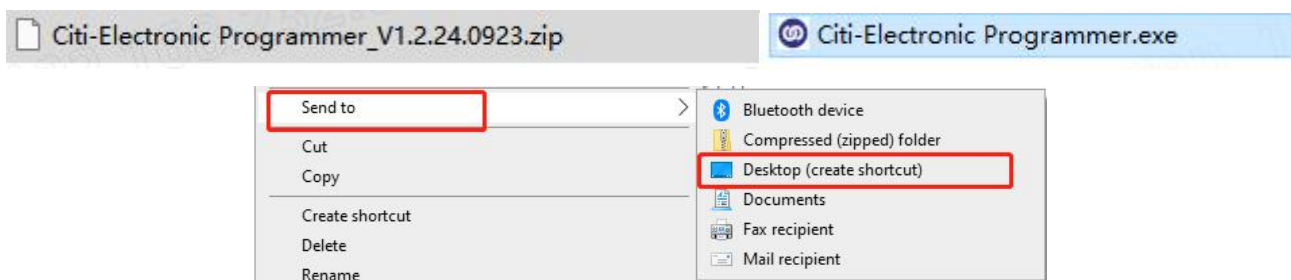

3.2.2. Driver installation


Open the Citi-Electronic Programmer software and click Connect. When the USB Serial Port (COM x) is not displayed at the port, click "Install USB Driver" and the USB driver will be installed.

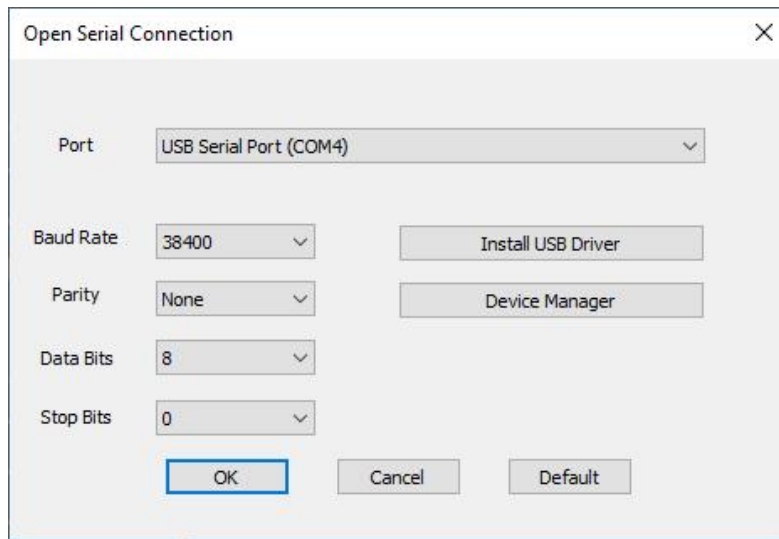


3.3. Functional description of the software

3.3.1. Software main interface


After "Read LED Driver" or "Load Default Values". Displays the features that the model has, orange for the functions that have been enabled, and gray for the functions that are not enabled.

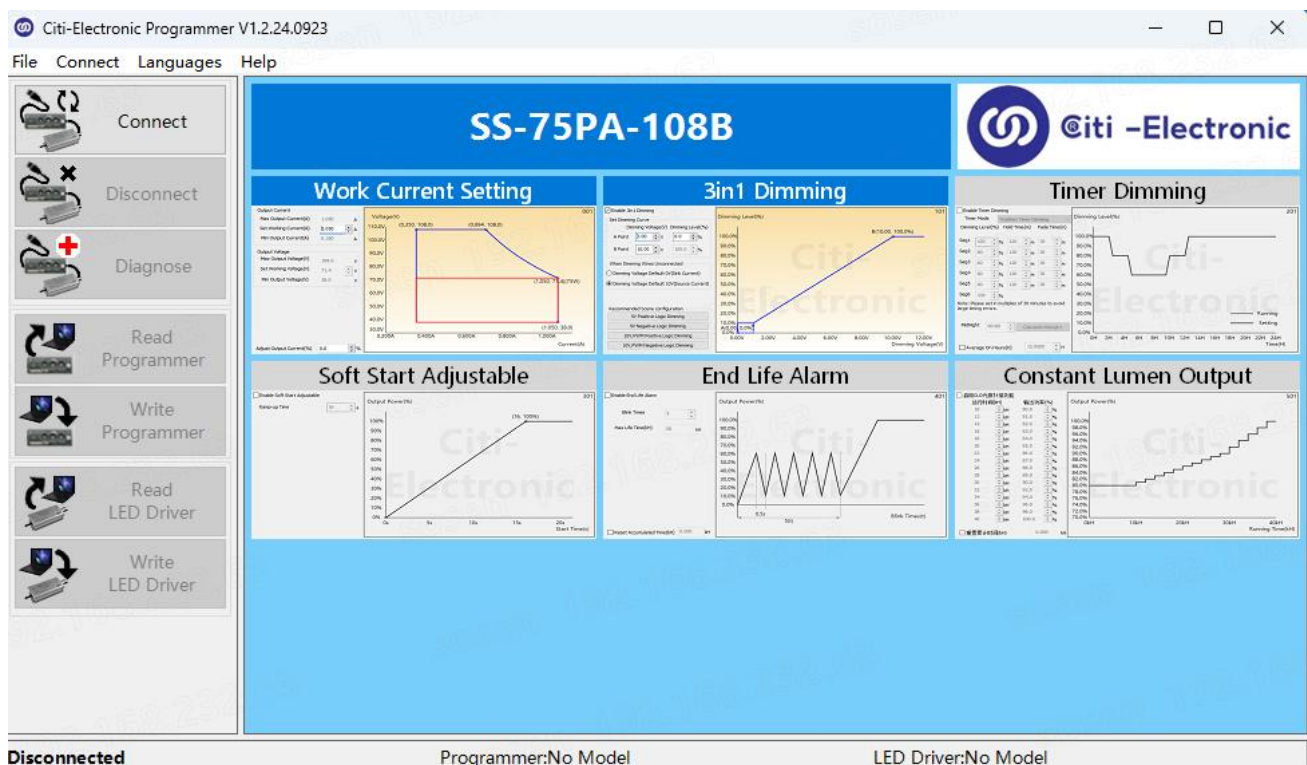

3.3.2. Window area description

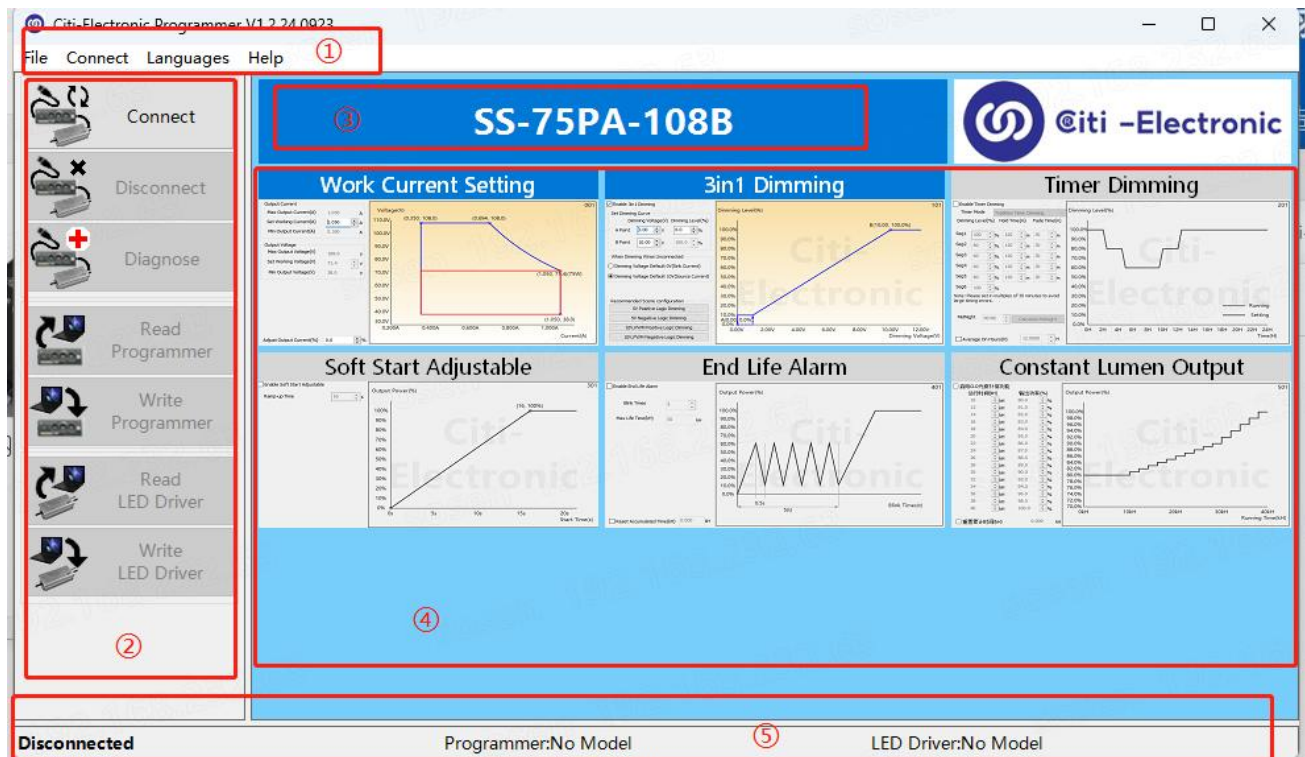

① Menu bar: With the function of saving and opening the model data file, switching languages, opening the user manual, upgrading software and so on.

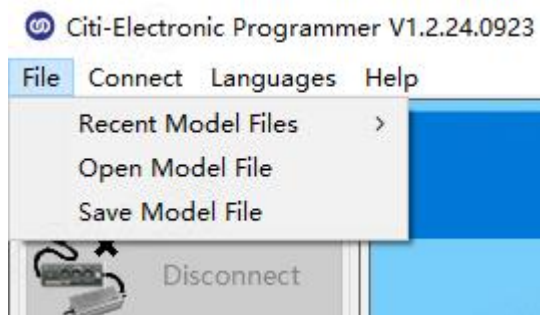

Open Model File: Loads the saved model file from a folder.

Save the model file: Save the loaded model as a data file, and the next time you can directly load the saved data by "Opening Model File".

② Operation bar: Operates the programmer and LED driver.

③ Load default values and display model names: Left mouse button opens the model


list and displays the model name.

④ Function Settings: Set the parameters of the current page of this model.


⑤ Model name display: Displays the operating status, the model saved by the current programmer and the model of the LED driver access.

3.4. Programmer firmware upgrade

(1) Automatic detection of upgrades: the programmer is connected to the LED driver and then connected to the computer. Click "Connect" and the Citi-Electronic Programmer software will automatically detect the programmer version and pop up the box to indicate if an upgrade is required. When a new version of the programmer is available, a box prompts you to upgrade the new version.

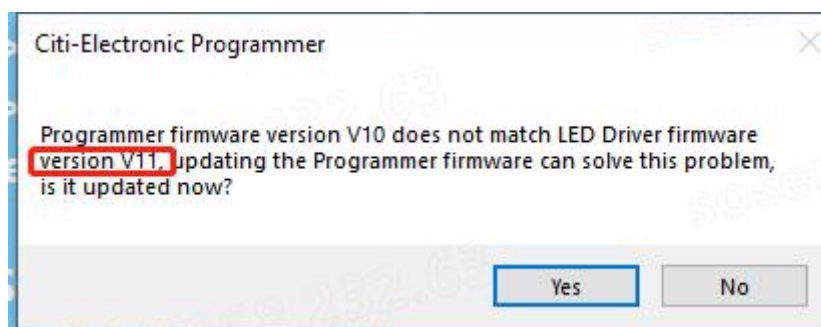

(2) Manual upgrade: Plug the programmer into the computer, connect to the Citi-Electronic Programmer software, click "Diagnose", click to "Upgrade Programmer Firmware", click "Select Firmware". In the "Citi-Electronic Programmer_V1.x.xx.xxx \ Firmware" folder, find the firmware package that needs to be upgraded, click "Start Upgrade", and wait for the upgrade to complete (do not power off the programmer during the upgrade process).

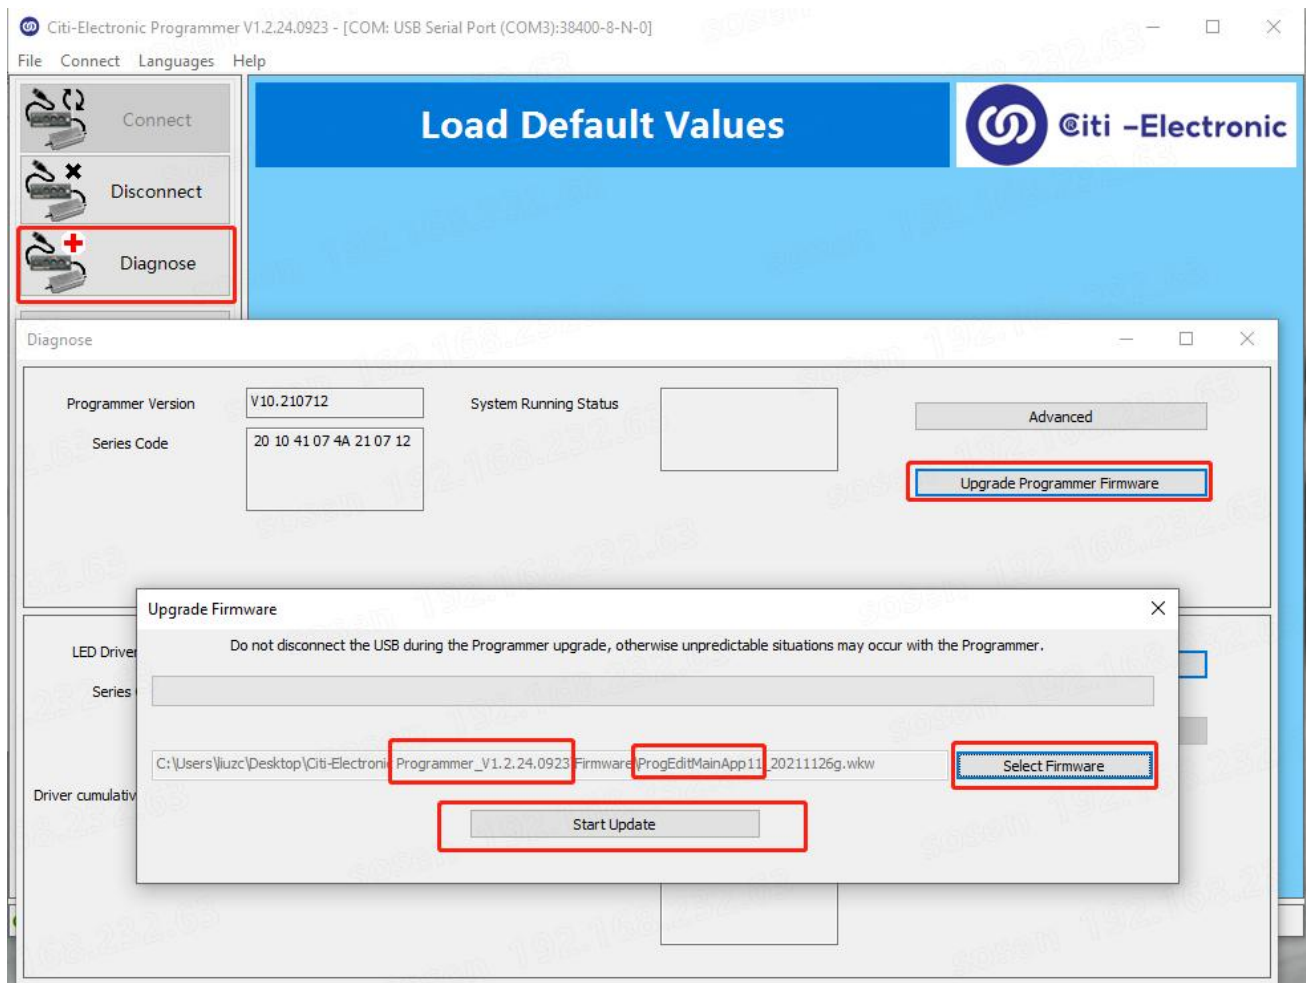

3.5. Online programming and offline programming

When writing to the LED driver, make sure that the model selected is the same as the model of the connected LED driver. If the model is different, the programmer will refuse to program and report an error.

3.5.1. Online programming

Online programming operation method: **Open “Citi-Electronic Programmer”**

**-> Connect -> Read LED Driver / Load Default Values -> modify data
-> Write LED Driver**

Connect: Click "Connect", the serial connection dialog box will pop up, select the correct COM port (USB Serial Port (COM x)).

Read LED Driver: Reads all data from the connected LED driver and refreshes the Citi-Electronic Programmer software interface.

Load Default Values: If you want to restore the default parameters of the model, you can click "Load Default Values", select the correct model, and load the default data into the software interface.

Write LED Driver: Write the set working current data, 3in1 dimming, timer dimming and other parameters to the LED driver.

Note: When writing to the LED driver or reading the LED driver, do not set the Citi-Electronic Programmer software parameters, there may be incorrect parameters written or read.

3.5.2. Offline programming

① Make an offline programmer

Making offline programming method: **Open "Citi-Electronic Programmer"**

**-> Connect -> Read LED Driver / Load Default Values -> modify data
-> Write Programmer**

The first four steps are the same as online programming, and the last step is to write Programmer to prepare the offline Programmer of this model.

② Batch programming

Offline programming method: **Made offline programmer -> USB power supply -> press the "P" key to program**

The model number of the writer programmer must be the same as the model of the LED driver for the write to succeed. If the models are different, the programmer will

refuse to program and alarm.

Press the "P" key to program the LED driver. After programming is complete, replace the other LED drivers that are ready for programming and repeat this operation.

4. Introduction to programmable LED driver functions

4.1. Programmable LED driver functions


- (1) Work Current Setting (Current and voltage can be set)
- (2) 3in1 Dimming (Compatible with PWM dimming, 0-5V, 0-10V, etc.)
- (3) Timer Dimming (Traditional Timer Dimming, Self-Adapt-Midnight Timer, Self-Adapt-Percentage Timer)
- (4) Software Start Adjustable (turns on gradually brightening)
- (5) End Life Alarm (Reminder to replace the LED driver)
- (6) Constant Lumen Output (LED lamp pearl attenuation compensation)
- (7) NTC Protection (LED module over-temperature protection function)
- (8) OTP Protection (LED driver over-temperature protection function)

4.2. Programmable LED driver functions explained in detail

4.2.1. Work Current Setting

The output current of the LED driver can be freely adjusted, and the parameters obtained by the LED driver are read by the programmer and displayed on the programming software interface. Modify the current parameter at the set operating current to change the output current of the LED driver. Modifying the parameters at the set operating voltage can reduce the operating voltage of the LED driver.


Fine-tune the output current, for the programmed current data and the actual output current of the LED driver error, the input error ratio, you can get the accurate current parameters (according to the maximum output current of the LED driver is the calculation base).

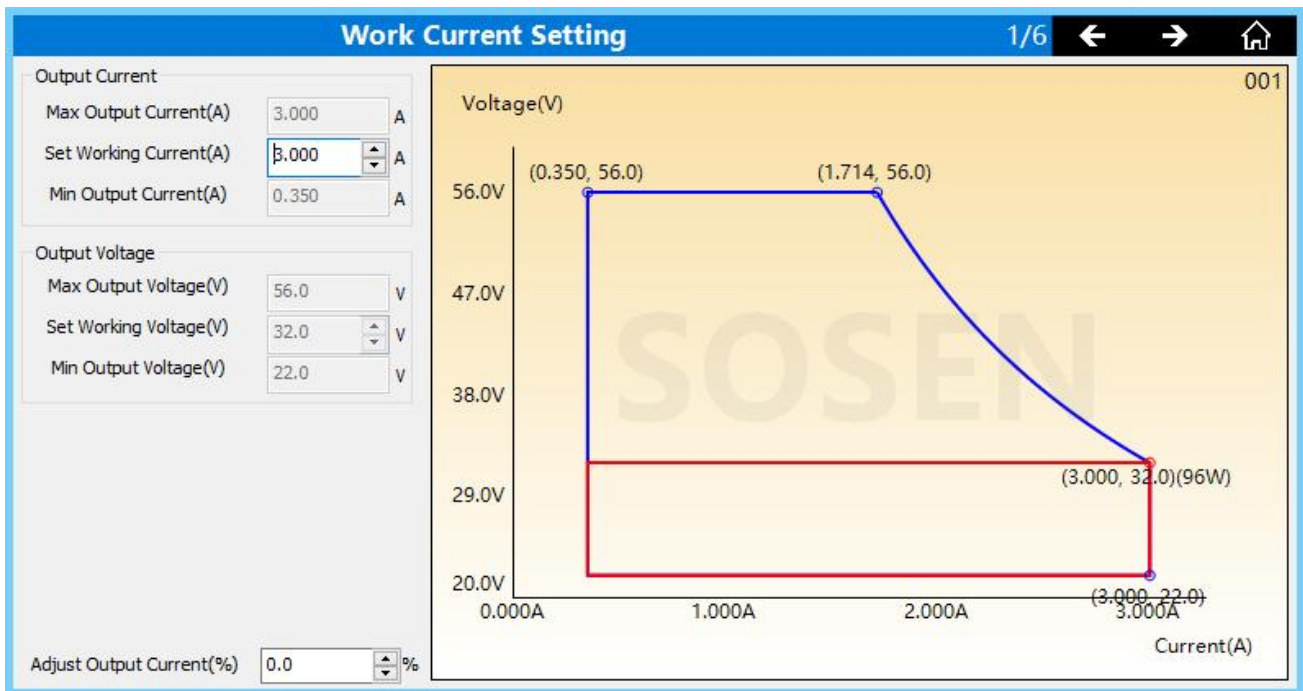

4.2.2. 3in1 Dimming

Set 3in1 Dimming (PWM dimming integrated into 0-10V dimming). The dimming voltage of point A and the dimming voltage of point B can be adjusted according to actual use and can be used in recommended scenarios. Dimming is suspended, and the output voltage of the dimming light can be set (only the hardware support of some LED drivers). Set the dimming level of point A to the minimum dimmable brightness (if the dimming level of point A is set to 100%, the dimming will not respond).

The off voltage and on voltage are set on the Model Parameters page.

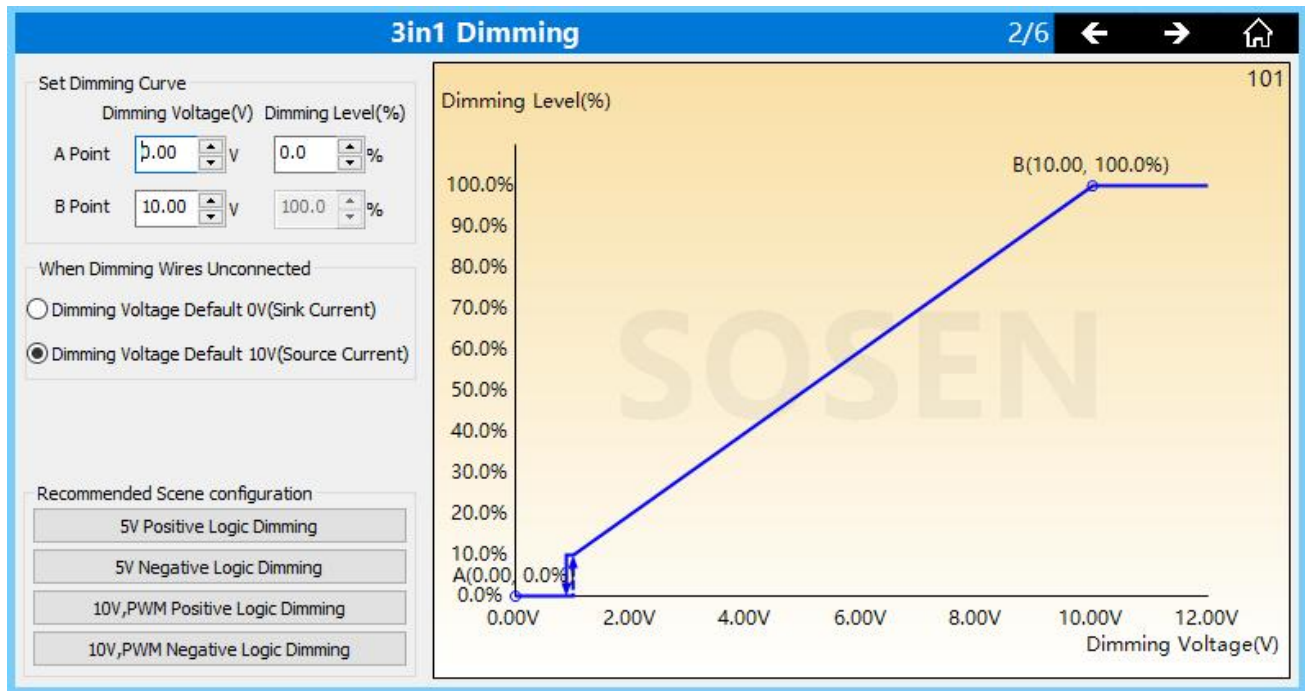

4.2.3. Timer Dimming


Traditional Timer Dimming, Self-Adapt-Midnight Timer, Self-Adapt-Percentage Timer. Time-controlled dimming settings can be made by setting 6 curves.

Traditional Timer Dimming: After the LED driver is powered on, it works according to the set dimming curve (adding a gradient time can slowly change between different dimming levels to prevent sudden changes in brightness and cause glare).

Self-Adapt-Midnight Timer: The 4th segment of the adaptive midnight timer curve acts as the midnight point. The LED driver automatically saves the effective power-on time and automatically calculates the adaptive cycle time through the effective calculation time of 4 times.


Self-Adapt-Percentage Timer: The adaptive percentage runs according to the automatically calculated adaptive cycle time according to the initially set dimming

curve.

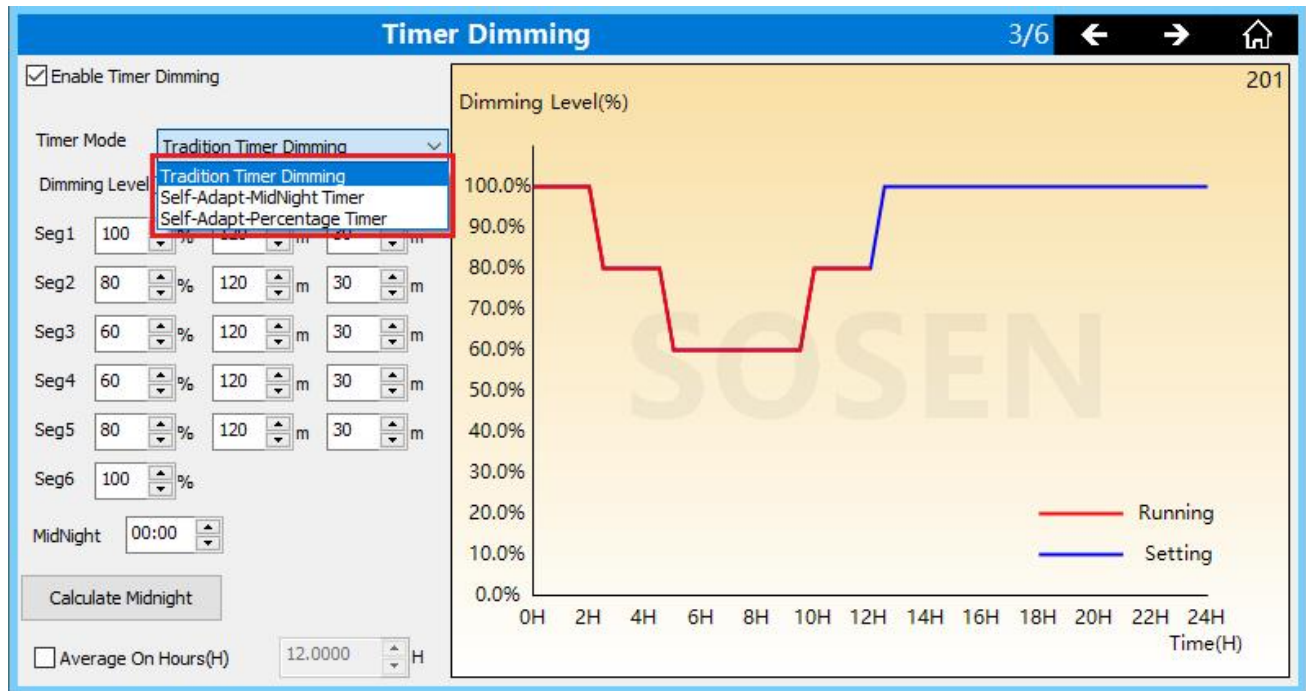


4.2.4. Software Start Adjustable

The LED driver start-up time can be programmed and set arbitrarily from 1 second to 255 seconds. Applicable scenes such as road lighting, tunnel lighting, square lighting, stadium lighting, plant lighting, etc. Can effectively prevent the process of turning on the lights, the lamp suddenly lit up, causing glare to people, causing traffic accidents. When multiple LED drivers are turned on at the same time, it can effectively prevent the AC line load power consumption from being too large at the moment of boot, and achieve the effect of protecting the AC line.

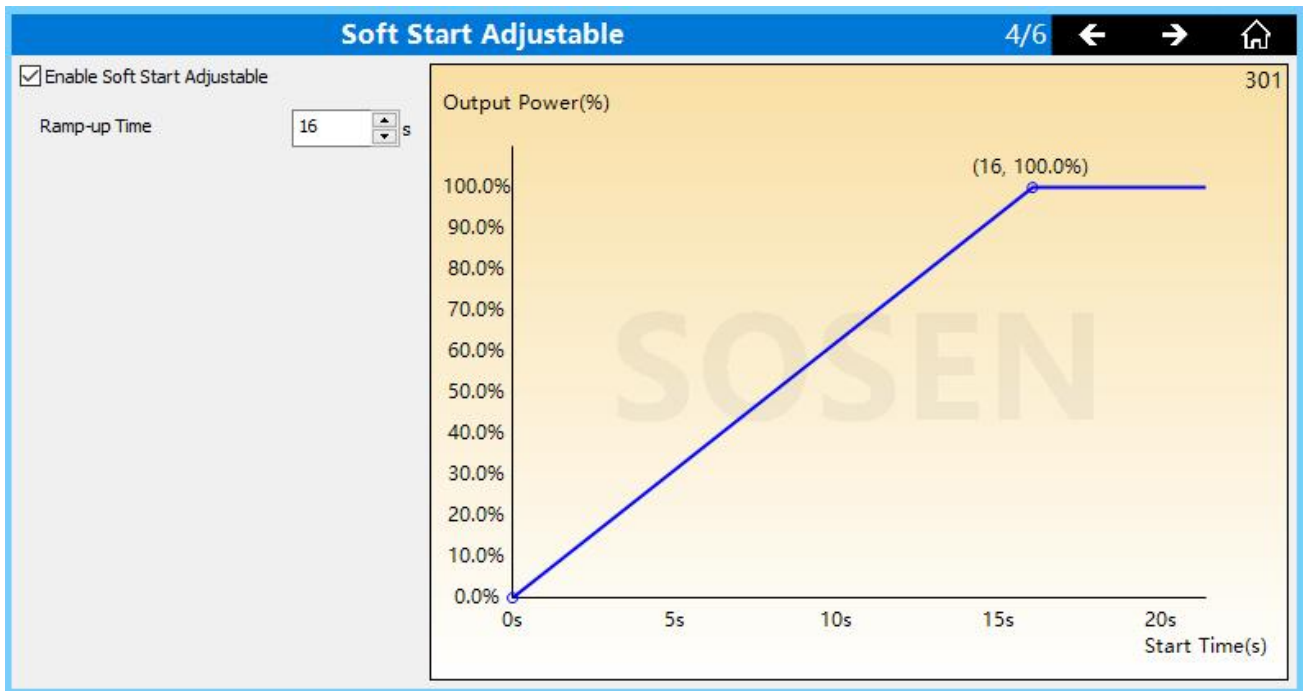


4.2.5. End Life Alarm

By presetting an LED driver life time, such as 50KH life, when the luminaire use time accumulates more than 50KH, the lamp will flash 5 times every time the lamp is turned on, reminding the user to replace the LED driver.

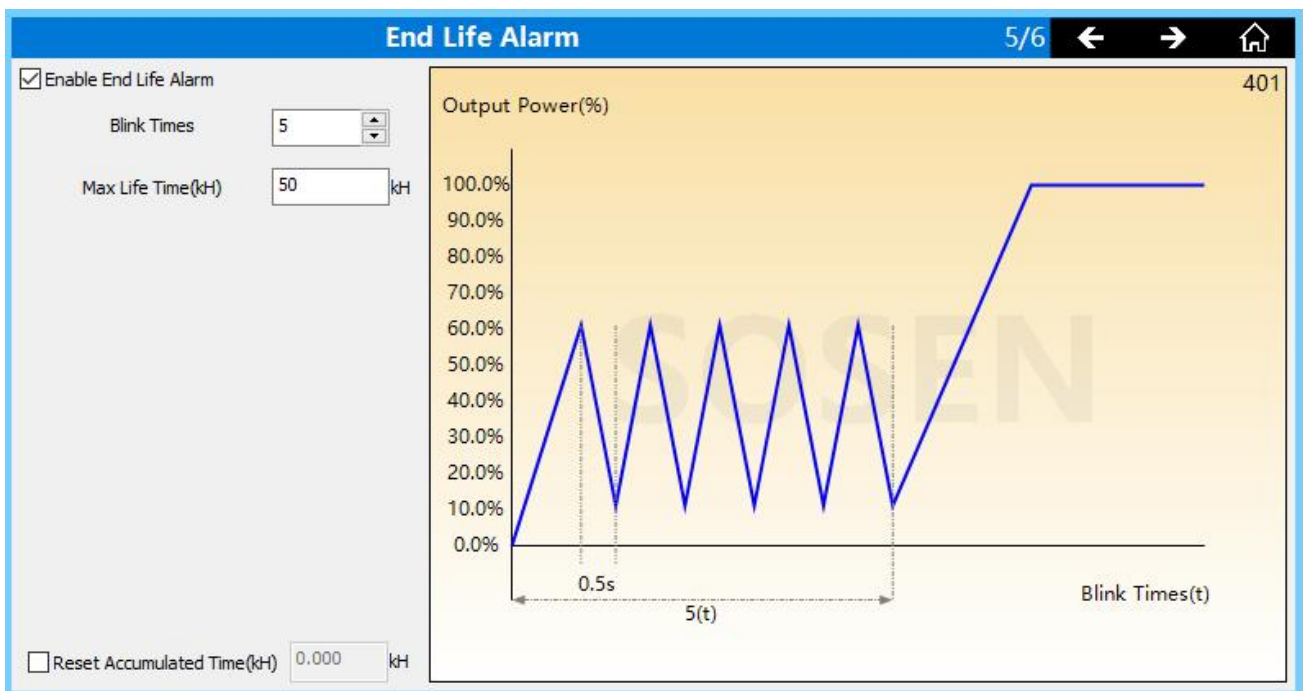

4.2.6. Constant Lumen Output

Light decay compensation function, according to the LED lamp light decay curve, in the life cycle of the lamp, by gradually increasing the output current, to achieve a constant output of LED luminous flux, the overall luminous effect remains unchanged.

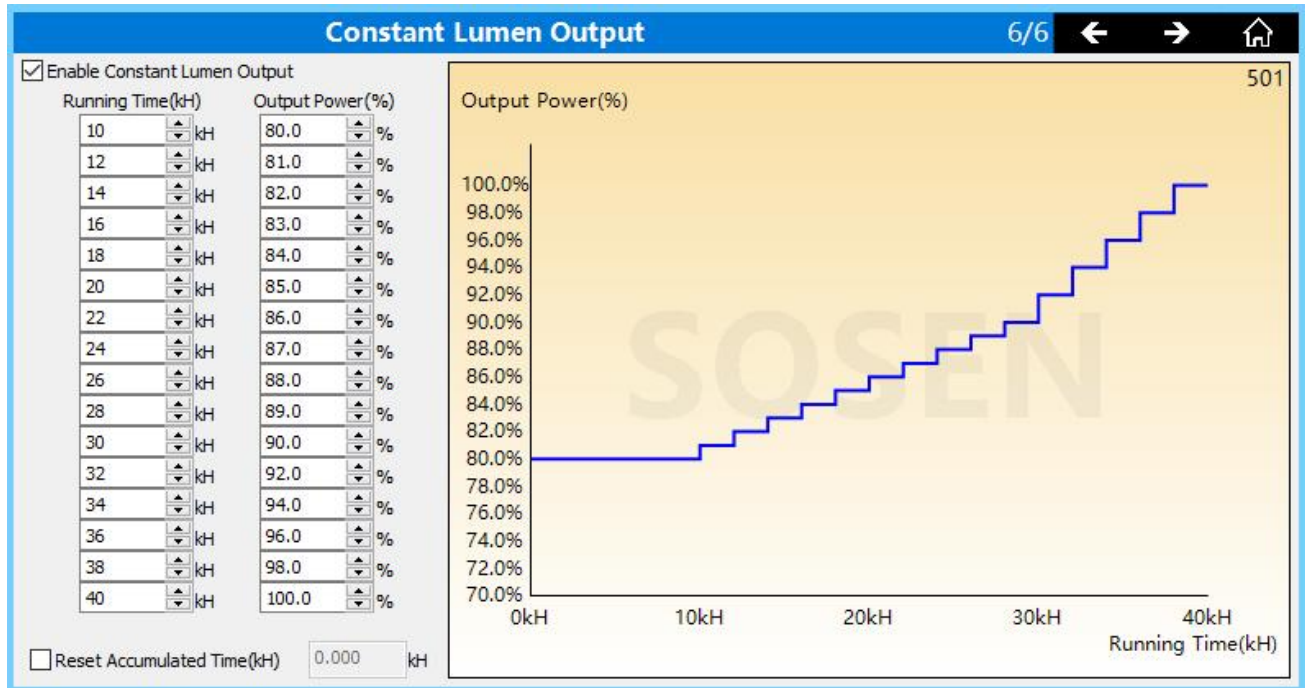

4.2.7. NTC Protection

At the LED driver end, a line is drawn to the NTC temperature switch sensor to feed the temperature on the LED module back to the internal controller of the LED driver.

Note: The LED driver hardware must support the NTC function.

1. Currently LED driver NTC functions are divided into two categories:

a. The NTC function supported by the D4i model is shown in the 621 Function screen shown in Figure 1. Models that support this feature are such as the 22PA-32F.

b. Other models support NTC functions, such as the 601 function interface shown in Figure 2 and Figure 3. These models support two types of NTC function logic, which can be selected through the "Model Characteristic Parameters" interface. Examples of models that support this function are the 1200NP-M430BHN.

2. NTC function on D4i models:

a. Three types of thermistors are supported: 10K Ω _B3950K, 10K Ω _B3435K, and 10K Ω _B3380K. A thermistor "Temperature Value - Resistance Value" mapping table is attached at the end of this section.

b. Operation Logic: According to the parameter setting shown in Figure 1, as shown in the blue line, when the temperature is lower than 60°C, the output power is 100%; when the temperature is greater than 60°C and less than 70°C, the output power runs according to the slanting line between 60°C and 70°C, and the output power will be accompanied by this lowering and raising as the temperature increases and decreases; when the temperature is greater than 70°C, the output power will be lowered to 10%, and keep at 10%; when the temperature is greater than 90°C, the output power will be turned off. ; when the temperature is greater than 90°C, the output will be turned off. Alternatively, setting the shutdown temperature to less than or equal to the temperature at which the end derating occurs will turn off the shutdown function and neither shutdown.

c. After the NTC is turned off, the output can be restored according to 3 different recovery conditions. The first condition is when the temperature drops to the end derating temperature and the output is restored. The second condition is when the

LED driver is re-powered and the output is restored. The third condition is when power is restored after reprogramming the LED driver. The output power level specified at the time of end derating will be restored.

3. NTC Functions for Other Models.

a. Supports two types of NTC runtime logic: runtime logic 1 and runtime logic 2.

b. Two types of thermistors are supported: 10K Ω _B3950K, 10K Ω _B3435K. A thermistor "Temperature Value - Resistance Value" mapping table is attached at the end of this section.

c. Running logic 1: According to "Model Characteristic Parameters" interface - "NTC running logic" option, select "Running logic 1", set the parameters as shown in Figure 2, as shown in the blue line, when the temperature is below 60°C, the output power is 100%; when the temperature is greater than 60°C and less than 70°C, the output power will run according to the slant line between 60°C and 70°C. As shown in the blue line, when the temperature is lower than 60°C, the output power is 100%; when the temperature is greater than 60°C and less than 70°C, the output power runs according to the slanting line between 60°C and 70°C, and the output power will be accompanied by the lowering and raising as the temperature increases and decreases; when the temperature is greater than 70°C, the output power will be reduced to 20% and kept at 20%; when the temperature is greater than 90°C, the output will be turned off; after NTC is turned off, you can choose to restore the output according to the checkbox option, and then the output will be restored. The output can be restored or not according to the checkbox option. In addition, setting the shutdown temperature

to less than or equal to the temperature of the end derating or unchecking the shutdown option will turn off the shutdown function, neither shutdown.

d. Running logic 2: According to "Model Characteristic Parameters" interface - "NTC running logic" option, select "Running logic 2", set the parameters as shown in Figure 3, as shown in the blue line, when the temperature is lower than 70°C, the output power is 100%; when the temperature reaches or greater than 70°C, a derating event will be triggered, and the output power will be derated by 5% from the current actual level. As shown in the blue line, when the temperature is lower than 70°C, the output power is 100%; when the temperature reaches or is greater than 70°C, a derating event will be triggered, and the output power will be derated by 5% from the current actual level, for example, if the current output power level is 100%, then the output level will be derated to 95%, and if the temperature is still greater than or equal to 70°C after a 2-minute time interval, a derating event will be triggered again, and the interval between two derating events will be at least 2 minutes. If the temperature is still greater than or equal to 70°C, a derating event will be triggered again. When multiple derating events occur, the output level will be reduced to a minimum of 20% and remain at 20%; regardless of the current output level at which the output level is at, when the temperature drops to 60°C, the output level will return to 100%. When the temperature is greater than or equal to 90°C, the output will be turned off; after the NTC is turned off, the output level will be restored to 20% when the temperature drops to 70°C; the output can be restored or not according to the checkbox. In addition, setting the shutdown temperature to less than or equal to the

end derating temperature or unchecking the shutdown option will turn off the shutdown function, neither shutdown.

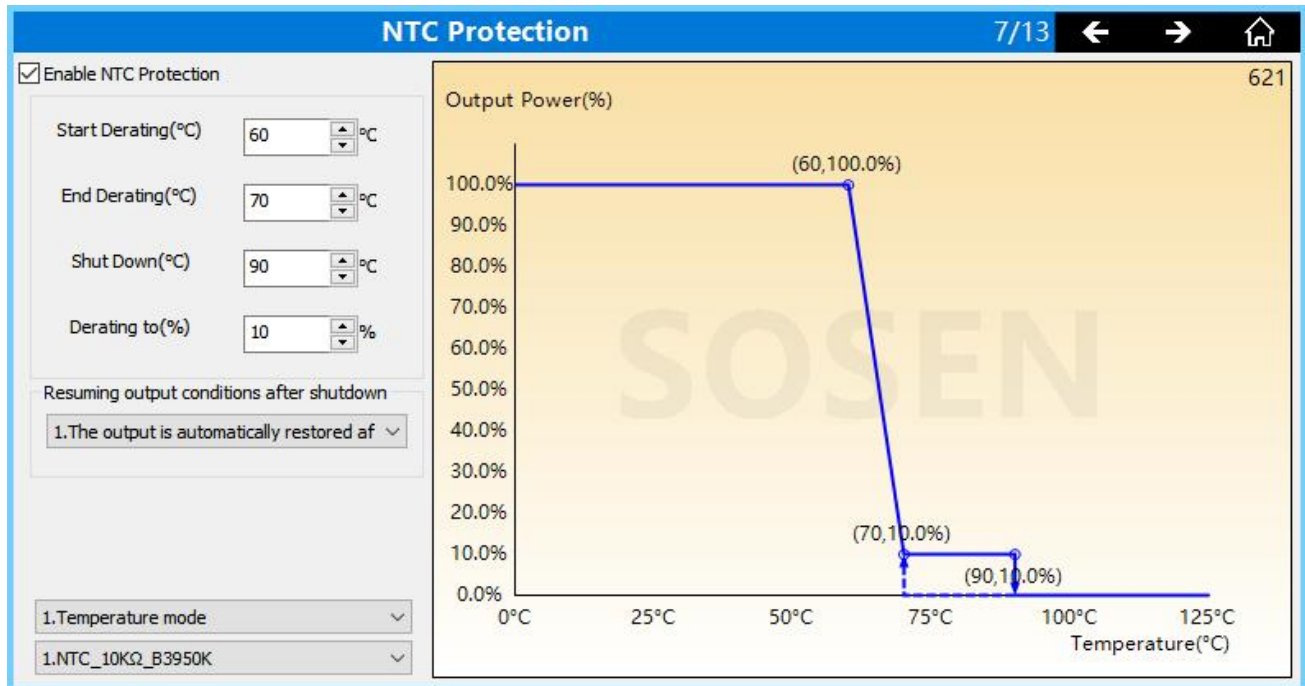


Figure 1

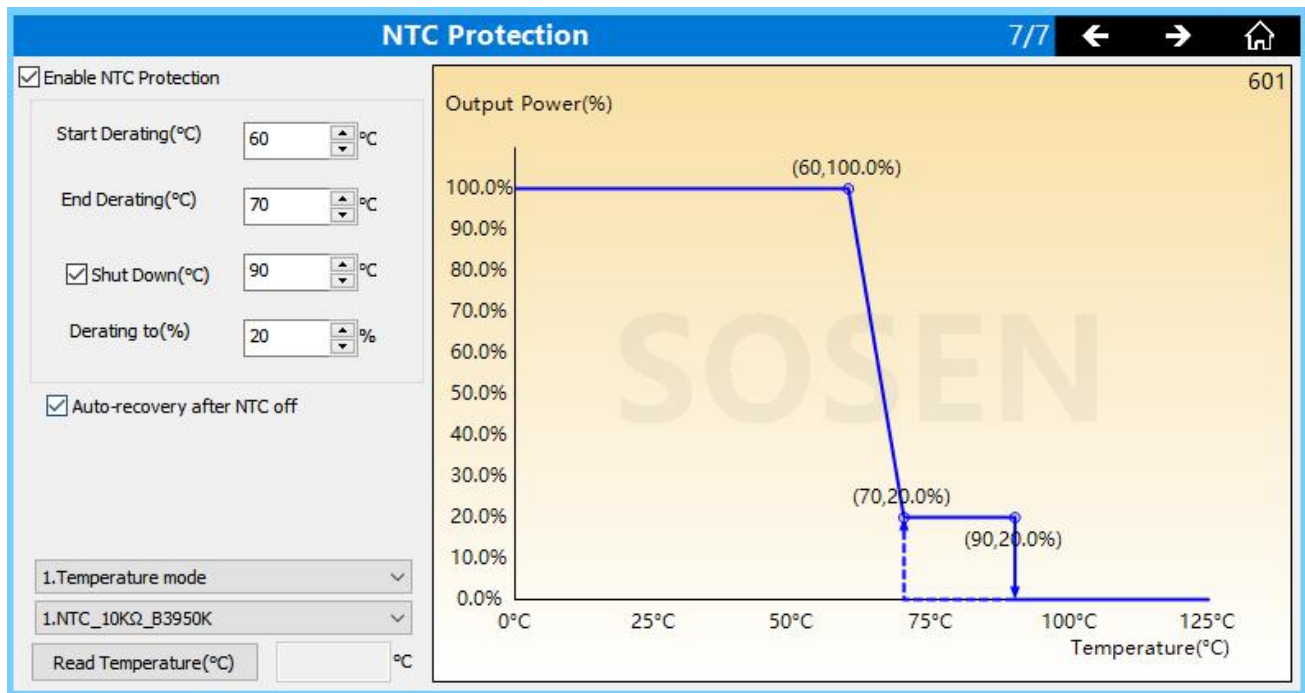


Figure 2

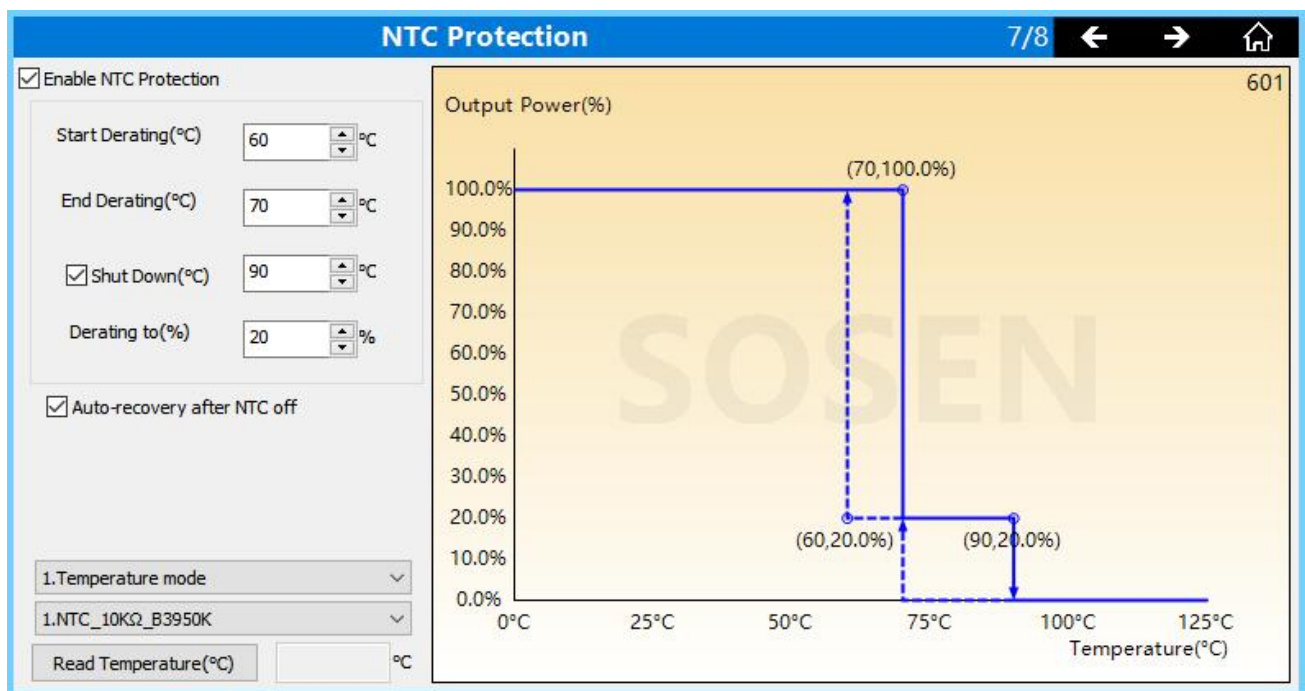


Figure 3

Model Parameters
8/8
← → 🏠

☒ **Modify Model Parameters**
801

Timer Dimming Mixed 3in1 Dimming

Timer Dimming Minimum Fade Time(s)

Timer Dimming Midnight

ELA Blink Lowest Brightness(%)

Output Ipwm Zero Calibration(%)

Output Ipwm Minimum Value(%)

Dimming On Level(%)

Dimming Off Level(%)

Dimming Calibration A

Dimming Calibration B

Real Time Clock Mode(Hex)

Communication Mode(Hex)

3in1 Dimming Priority

8 s

00:00

11.2 %

0.0 %

0.0 %

10.0 %

8.8 %

1.0000 0.0000

21.9000 0.0000

0x00 0x00 Hex

0x00 0x00 Hex

Color Temperature Output Level Min(%)

0.0 %

NTC running logic

Running logic 1
Running logic 1
Running logic 2

☐ No Limit to Dimming Level Before Dimming Off
☐ No Limit to Dimming Level After Dimming Off
☐ Force Dimming Input Signal to be 128 Steps
☐ Force Dimming Input Signals to Fast Filter Mode
☐ Re-enter SSA After Dimming Off

Figure 4

A thermistor "temperature-resistance" mapping table is attached.

10KΩ_B3950K		10KΩ_B3435K		10KΩ_B3380K	
Temperature	Resistance	Temperature	Resistance	Temperature	Resistance
°C	KΩ	°C	KΩ	°C	KΩ
0	32.7547	0	27.4936	0	27.2186
1	31.1243	1	26.3245	1	26.076
2	29.5847	2	25.2119	2	24.9877
3	28.1301	3	24.1527	3	23.9509
4	26.7556	4	23.1442	4	22.9629
5	25.4562	5	22.1835	5	22.0211
6	24.2274	6	21.2682	6	21.123
7	23.065	7	20.3959	7	20.2666
8	21.965	8	19.5644	8	19.4495
9	20.9239	9	18.7714	9	18.6698
10	19.938	10	18.0151	10	17.9255
11	19.0041	11	17.2935	11	17.2139
12	18.1193	12	16.6048	12	16.5344
13	17.2807	13	15.9475	13	15.8856
14	16.4857	14	15.3198	14	15.2658
15	15.7317	15	14.7203	15	14.6735
16	15.0164	16	14.1475	16	14.1075
17	14.3376	17	13.6003	17	13.5664

18	13.6933	18	13.0772	18	13.0489
19	13.0816	19	12.5771	19	12.554
20	12.5005	20	12.0988	20	12.0805
21	11.9485	21	11.6413	21	11.6281
22	11.4239	22	11.2037	22	11.1947
23	10.9252	23	10.7848	23	10.7795
24	10.451	24	10.3839	24	10.3815
25	10	25	10	25	10
26	9.5709	26	9.6324	26	9.6342
27	9.1626	27	9.2802	27	9.2835
28	8.7738	28	8.9428	28	8.947
29	8.4037	29	8.6195	29	8.6242
30	8.0512	30	8.3096	30	8.3145
31	7.7154	31	8.0124	31	8.0181
32	7.3953	32	7.7275	32	7.7337
33	7.0903	33	7.4541	33	7.4609
34	6.7995	34	7.1919	34	7.1991
35	6.5221	35	6.9403	35	6.9479
36	6.2576	36	6.6987	36	6.7067
37	6.0051	37	6.4669	37	6.4751
38	5.7642	38	6.2442	38	6.2526
39	5.5342	39	6.0304	39	6.039
40	5.3146	40	5.825	40	5.8336
41	5.1049	41	5.6276	41	5.6357
42	4.9045	42	5.438	42	5.4454
43	4.713	43	5.2557	43	5.2623
44	4.53	44	5.0804	44	5.0863
45	4.3551	45	4.9119	45	4.9169
46	4.1878	46	4.7498	46	4.7539
47	4.0278	47	4.5939	47	4.5971
48	3.8748	48	4.4439	48	4.4461
49	3.7283	49	4.2995	49	4.3008
50	3.5882	50	4.1605	50	4.1609
51	3.454	51	4.0268	51	4.0262
52	3.3255	52	3.898	52	3.8964
53	3.2025	53	3.7739	53	3.7714
54	3.0846	54	3.6544	54	3.651
55	2.9717	55	3.5393	55	3.535
56	2.8635	56	3.4284	56	3.4231
57	2.7597	57	3.3215	57	3.3152
58	2.6603	58	3.2185	58	3.2113
59	2.5649	59	3.1191	59	3.111
60	2.4734	60	3.0234	60	3.0143


61	2.3856	61	2.931	61	2.9224
62	2.3014	62	2.8419	62	2.8337
63	2.2206	63	2.7559	63	2.7482
64	2.1431	64	2.6729	64	2.6657
65	2.0686	65	2.5929	65	2.5861
66	1.997	66	2.5156	66	2.5093
67	1.9283	67	2.441	67	2.4351
68	1.8623	68	2.369	68	2.3635
69	1.7989	69	2.2994	69	2.2943
70	1.738	70	2.2322	70	2.2275
71	1.6794	71	2.1673	71	2.1627
72	1.6231	72	2.1046	72	2.1001
73	1.5689	73	2.044	73	2.0396
74	1.5168	74	1.9854	74	1.9811
75	1.4667	75	1.9288	75	1.9245
76	1.4185	76	1.874	76	1.8698
77	1.3722	77	1.8211	77	1.817
78	1.3275	78	1.7699	78	1.7658
79	1.2845	79	1.7204	79	1.7164
80	1.2431	80	1.6725	80	1.6685
81	1.2033	81	1.6262	81	1.6224
82	1.1649	82	1.5813	82	1.5777
83	1.1279	83	1.5379	83	1.5345
84	1.0923	84	1.4959	84	1.4927
85	1.058	85	1.4553	85	1.4521
86	1.0249	86	1.4159	86	1.4129
87	0.993	87	1.3778	87	1.3749
88	0.9623	88	1.3408	88	1.3381
89	0.9326	89	1.3051	89	1.3025
90	0.904	90	1.2704	90	1.268
91	0.8764	91	1.2368	91	1.2343
92	0.8498	92	1.2043	92	1.2016
93	0.8241	93	1.1728	93	1.17
94	0.7994	94	1.1422	94	1.1393
95	0.7754	95	1.1126	95	1.1096
96	0.7523	96	1.0839	96	1.0807
97	0.73	97	1.056	97	1.0528
98	0.7085	98	1.029	98	1.0256
99	0.6877	99	1.0028	99	0.9993
100	0.6676	100	0.9774	100	0.9738
101	0.6482	101	0.9527	101	0.9492
102	0.6295	102	0.9288	102	0.9254
103	0.6113	103	0.9055	103	0.9022

104	0.5938	104	0.883	104	0.8798
105	0.5769	105	0.8611	105	0.858
106	0.5605	106	0.8399	106	0.8368
107	0.5447	107	0.8193	107	0.8162
108	0.5293	108	0.7992	108	0.7963
109	0.5145	109	0.7798	109	0.7769
110	0.5002	110	0.7609	110	0.758
111	0.4863	111	0.7425	111	0.7397
112	0.4729	112	0.7247	112	0.7219
113	0.4599	113	0.7074	113	0.7046
114	0.4474	114	0.6906	114	0.6878
115	0.4352	115	0.6742	115	0.6715
116	0.4234	116	0.6583	116	0.6556
117	0.412	117	0.6429	117	0.6402
118	0.4009	118	0.6278	118	0.6252
119	0.3902	119	0.6132	119	0.6106
120	0.3799	120	0.599	120	0.5964
				121	0.5826
				122	0.5692
				123	0.5562
				124	0.5435
				125	0.5311

4.2.8. OTP Protection

There is a temperature sensor inside the LED driver that detects the internal temperature of the LED driver. The internal temperature protection point of the LED driver can be set via the programming interface.

Note: The LED driver hardware must support OTP functionality.

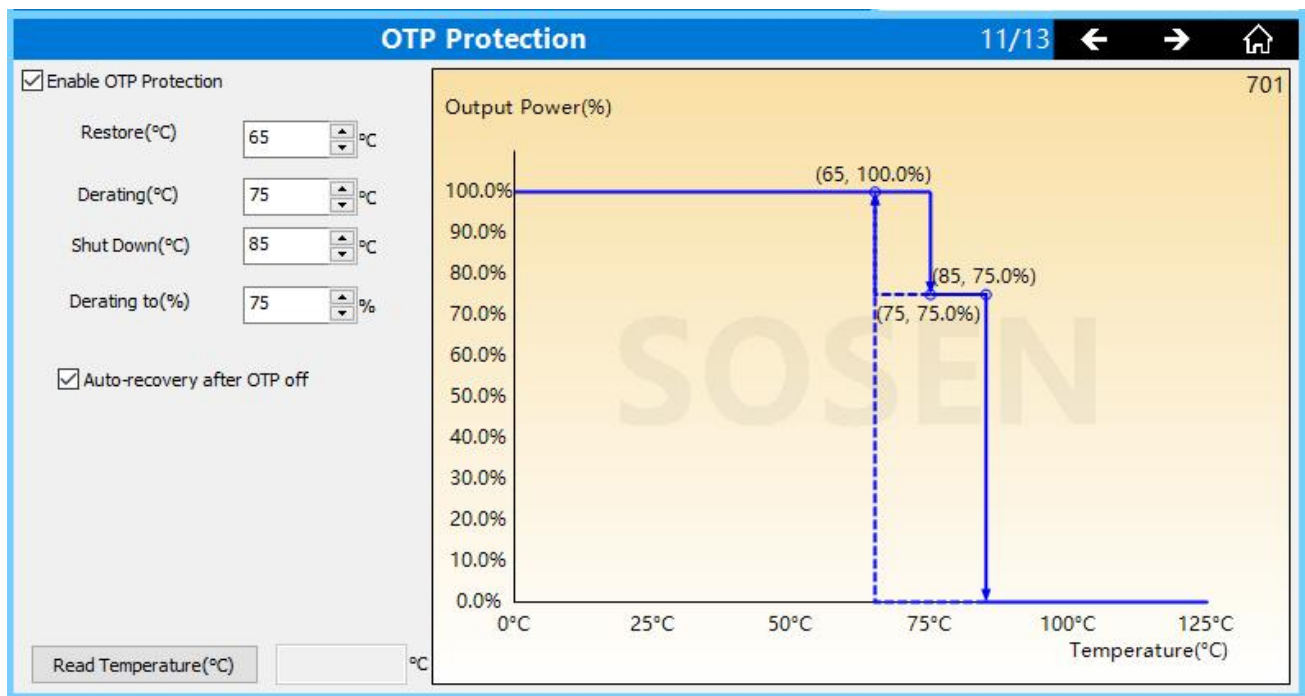

4.2.9. Model Parameters

The model parameters page can set the dimming on voltage and dimming off voltage of the LED driver, as well as other parameters (the setting of the dimming on voltage and dimming off voltage requires hardware support).

Model Parameters 12/13

☒ Modify Model Parameters

Timer Dimming Mixed 3in1 Dimming

Timer Dimming Minimum Fade Time(s)

Timer Dimming MidNight

ELA Blink Lowest Brightness(%)

Output Ipwm Zero Calibration(%)

Output Ipwm Minimum Value(%)

Dimming On Level(%)

Dimming Off Level(%)

Dimming Calibration A

Dimming Calibration B

Real Time Clock Mode(Hex)

Communication Mode(Hex)

☐ No Limit to Dimming Level Before Dimming Off

☐ No Limit to Dimming Level After Dimming Off

☐ Force Dimming Input Signal to be 128 Steps

☐ Force Dimming Input Signals to Fast Filter Mode

☐ Re-enter SSA After Dimming Off

3in1 Dimming Priority

8 s

00:00

11.2 %

0.0 %

0.0 %

10.0 %

8.0 %

1.0000	0.0000
21.5000	0.0000

0x00 0x00 Hex

0x00 0x00 Hex

4.2.10. DALI Application Parameters

On this page, you can set the DALI application parameters of the LED driver, including configuration parameters, address parameters, scene parameters and group parameters (when setting parameters, you need to tick the corresponding parameters).

DALI Application Parameters
10/13
← → 🏠

☐ Update Config Param

Fade Time Rate(Hex)

Extend Fade Time(Hex)

Minimum Level

Maximum Level

Power On Level

System Failure Level

Fast Fade Time(Hex)

Operating Mode(Hex)

Bus Power Supply

☐ Update Scene

Scene0	MASK
Scene1	MASK
Scene2	MASK
Scene3	MASK
Scene4	MASK
Scene5	MASK
Scene6	MASK
Scene7	MASK
Scene8	MASK
Scene9	MASK
Scene10	MASK
Scene11	MASK
Scene12	MASK
Scene13	MASK
Scene14	MASK
Scene15	MASK

☐ Update Group

<input type="checkbox"/> Group0
<input type="checkbox"/> Group1
<input type="checkbox"/> Group2
<input type="checkbox"/> Group3
<input type="checkbox"/> Group4
<input type="checkbox"/> Group5
<input type="checkbox"/> Group6
<input type="checkbox"/> Group7
<input type="checkbox"/> Group8
<input type="checkbox"/> Group9
<input type="checkbox"/> Group10
<input type="checkbox"/> Group11
<input type="checkbox"/> Group12
<input type="checkbox"/> Group13
<input type="checkbox"/> Group14
<input type="checkbox"/> Group15

☐ Update random address

Random address(Hex)(H)

Random address(Hex)(M)

Random address(Hex)(L)

☐ Update short address

Short address(Hex)

4.2.11. Product Identification

On this page, the product identification parameters of the LED driver can be displayed and cannot be changed.

Product Identification
11/13
← → 🏠

Product Identification
912

☐ Update Product ID

Product ID

00,FF,FF,00,01,2E,21,00,00,01,06,57,76,3B,79,AB

^
v

4.2.12. DALI Memory Bank 1

On this page, you can set the relevant parameters of DALI Memory Bank 1 (when setting relevant parameters, you need to tick the relevant parameters).

DALI Memory Bank 1
13/13
← → 🏠

914

<input type="checkbox"/> Luminaire manufacturer GTIN	<input type="text" value="281474976710655"/>	
<input type="checkbox"/> Luminaire identification number(Hex)	<input type="text" value="FFFFFFFFFFFFFF"/>	Hex
<input type="checkbox"/> Content Format(Hex)	<input type="text" value="0003"/>	Hex
<input type="checkbox"/> Luminaire year of manufacture(0~99)	<input type="text" value="255"/>	
<input type="checkbox"/> Luminaire week of manufacture(1~53)	<input type="text" value="255"/>	
<input type="checkbox"/> Nominal input power(W)	<input type="text" value="65535"/>	W
<input type="checkbox"/> Power at min dim level(W)	<input type="text" value="65535"/>	W
<input type="checkbox"/> Nominal min AC input voltage(90~480V)	<input type="text" value="65535"/>	V
<input type="checkbox"/> Nominal max AC input voltage(90~480V)	<input type="text" value="65535"/>	V
<input type="checkbox"/> Nominal light output	<input type="text" value="16777215"/>	
<input type="checkbox"/> Color rendering index CRI(0~100)	<input type="text" value="255"/>	
<input type="checkbox"/> Correlated color temperature CCT	<input type="text" value="65535"/>	
<input type="checkbox"/> Light distribution type	<input type="text" value="255"/>	
<input type="checkbox"/> Luminaire description	<div style="border: 1px solid #ccc; height: 20px; text-align: center;">^ v</div>	
<input type="checkbox"/> Luminaire name	<div style="border: 1px solid #ccc; height: 20px; text-align: center;">^ v</div>	


4.3. Introduction to the adaptive timer function

4.3.1. Adaptive timer function application

Citi-Electronic's adaptive timer function takes into account the use of lamps and lanterns in different regions and different seasons. The LED driver automatically calculates the runtime in a "self-learning" manner, corresponding to the timer dimming curve set at the time of initial installation, to achieve adaptive timing dimming function. The timer dimming curve only needs to be set once before installation. Citi-Electronic's adaptive timer dimming function consists of 2 modes: "Self-Adapt-Midnight Timer" and "Self-Adapt-Percentage Timer".

4.3.2. Adaptive time calculation


(1) Manually switch on and off the machine at least once a day

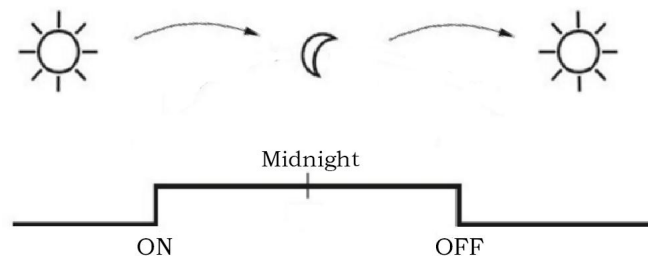

(2) The effective run time is calculated automatically

- a. The power-on running time is not less than 2 hours, and it is recorded as 1 effective running time.
- b. The LED driver power-down time is not less than 1s, which will be recorded as a new time.
- c. The difference between the most recent effective running time and the absolute


value of the effective running time in front of it is not more than 1 hour, which is the valid calculation data. 4 valid calculations to get "Average On Hours" (AOH).

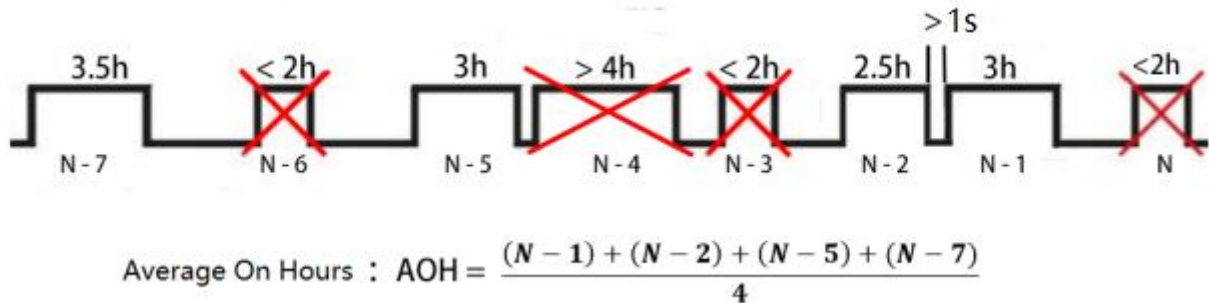

4.3.3. Adaptive timer dimming


(1) Self-Adapt-Midnight Timer

- Use the starting point set in the 4th segment of the dimming curve as the adaptive midnight point.
- Then according to "Average On Hours" (AOH), it corresponds to both sides of midnight. The red line is the change in power output when the LED driver is running.

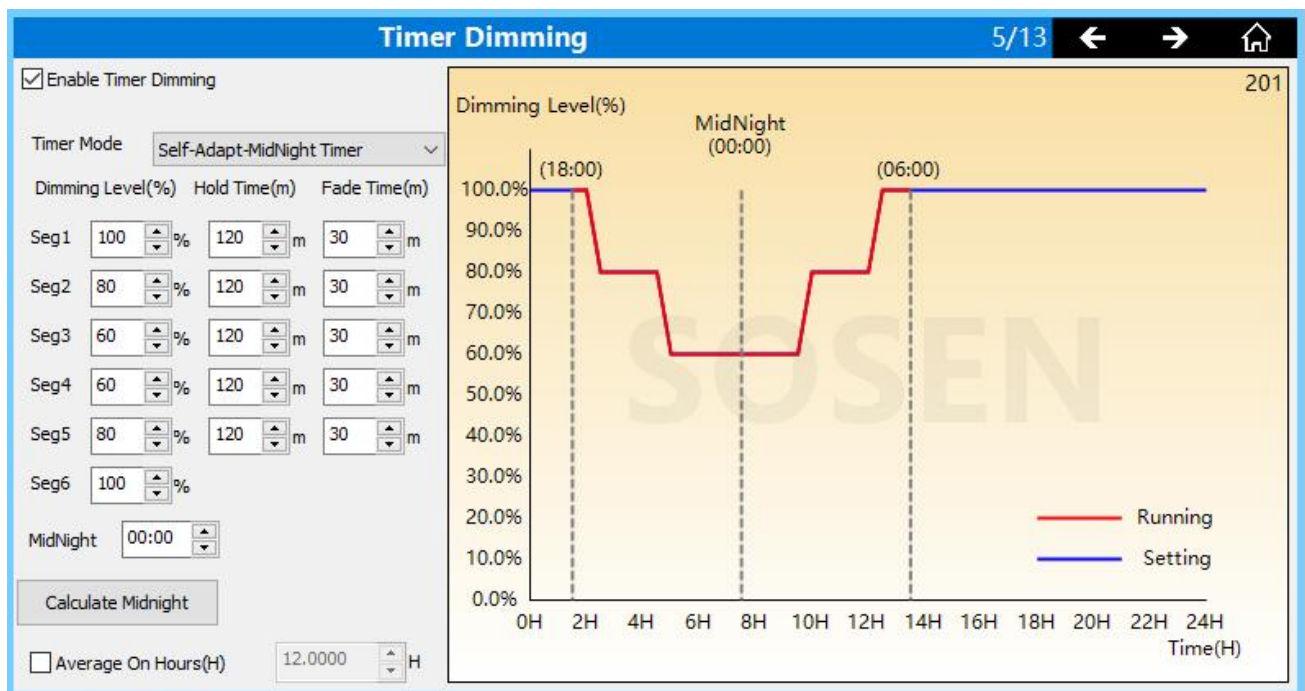

(2) Self-Adapt-Percentage Timer

According to the percentage ratio of "Average On Hours" (AOH), the time of setting the curve is converted proportionally to obtain the LED driver running output change curve

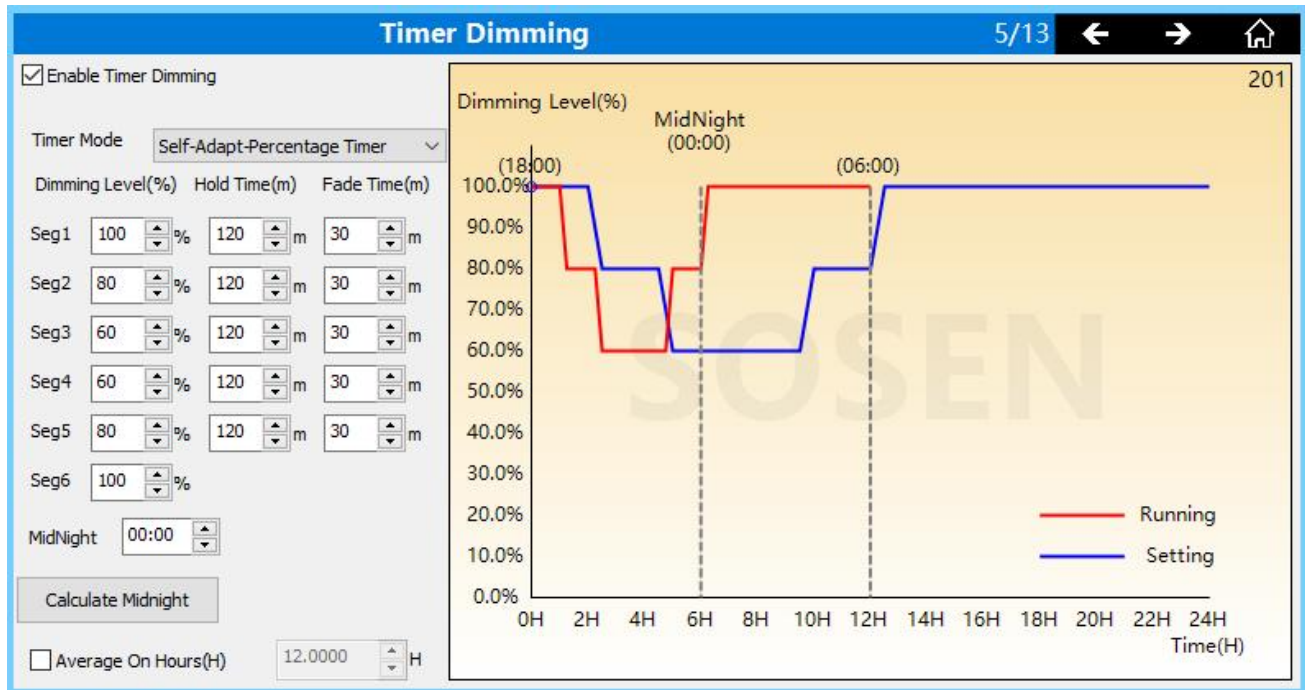

Versions	Date	Description
V1.00	2022/02/11	Initial release
V1.01	2022/04/11	Fixed some page display
V1.1	2022/10/13	Add some features
V1.2	2023/04/25	Added new communication methods for models.